
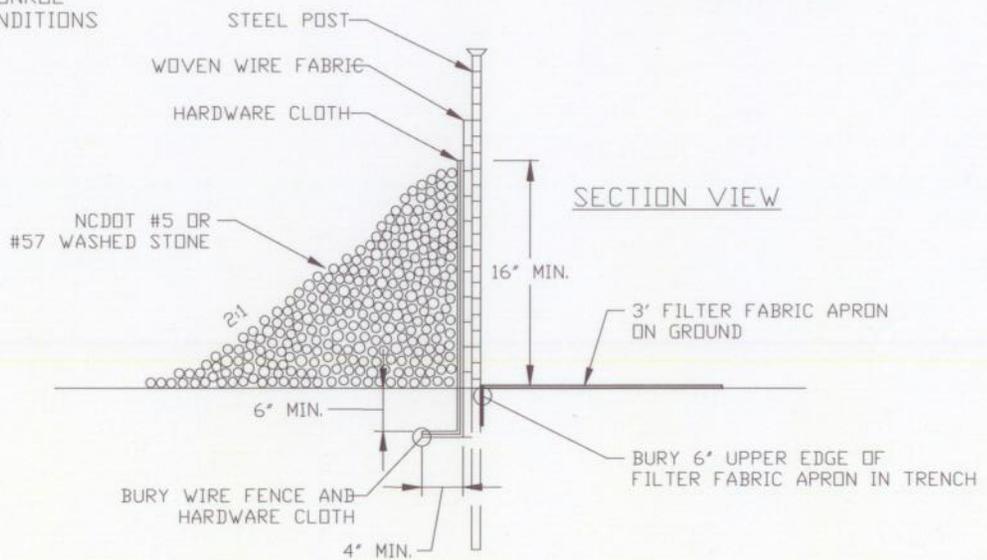


FRONT VIEW

NOTES:

1. REMOVE SEDIMENT WITH HALF OF STONE OUTLET IS COVERED.
2. REPLACE STONE AS NEEDED TO ENSURE DEWATERING.
3. SEE NCDENR EROSION AND SEDIMENT CONTROL PLANNING AND DESIGN MANUAL FOR CONDITIONS WHERE PRACTICE APPLIES; PLANNING CONSIDERATIONS & DESIGN CRITERIA.

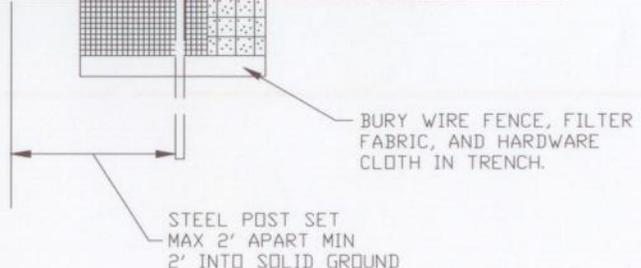

SECTION VIEW